



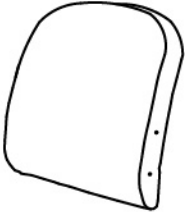


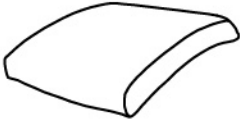





**IMPORTANT NOTICE:
HARDWARE PACKAGE IS ATTACHED
ON THE BOTTOM OF SEAT CUSHION.**

MODEL: 9560 9570

| | | |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| (1)x1 | (2)x1 | (3)x1 (L)x1 (R) |
|  |  |  |
| Back | Seat | Right & Left Frame |
| (4)x1 | (5)x1 | |
|  |  | |
| Back Bar | Front Bar | |
| (A)x8 |  | WOOD CAP |
| (B)x4 |  | M6*80 SCREW FOR FRAME |
| (C)x4 |  | M6*60 SCREW FOR BACK CUSHION |
| (D)x3 |  | M6*22 SCREW FOR SEAT CUSHION |
| (E)x1 |  | ALLEN KEY |



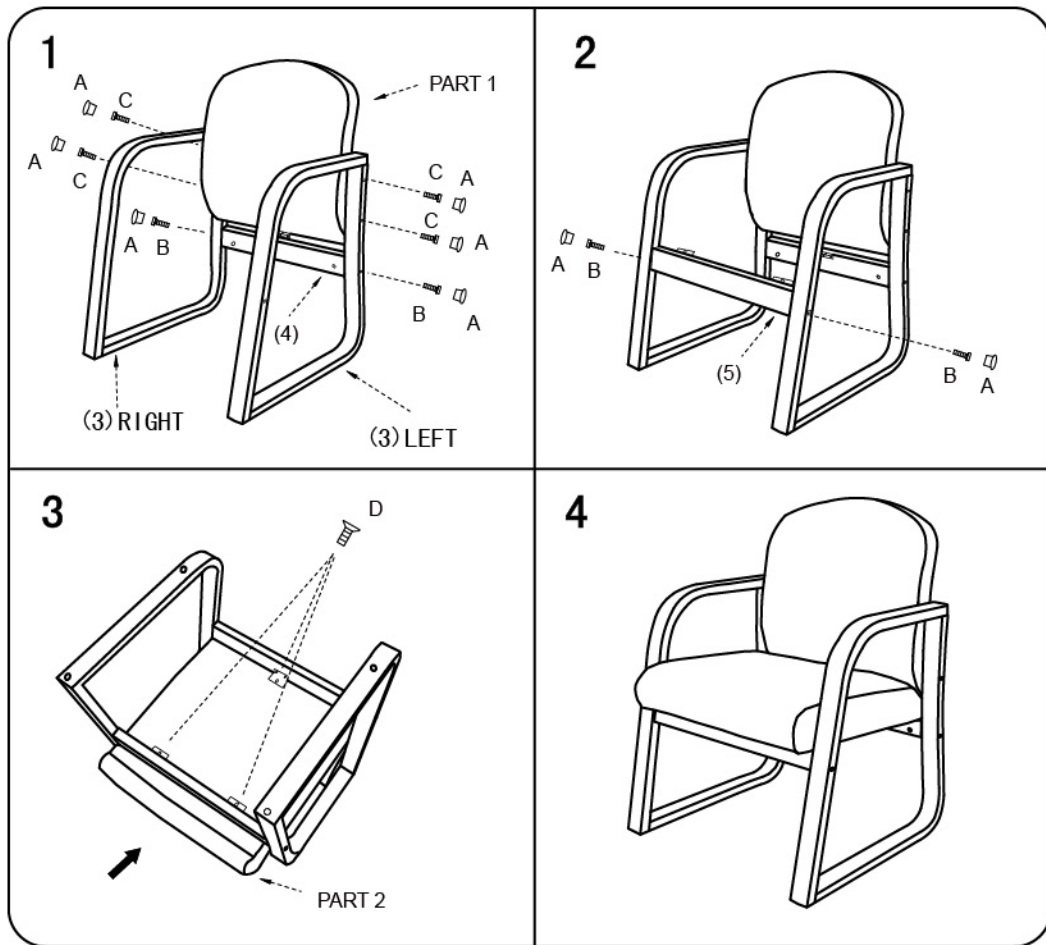Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.