
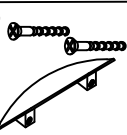
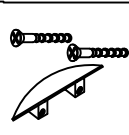







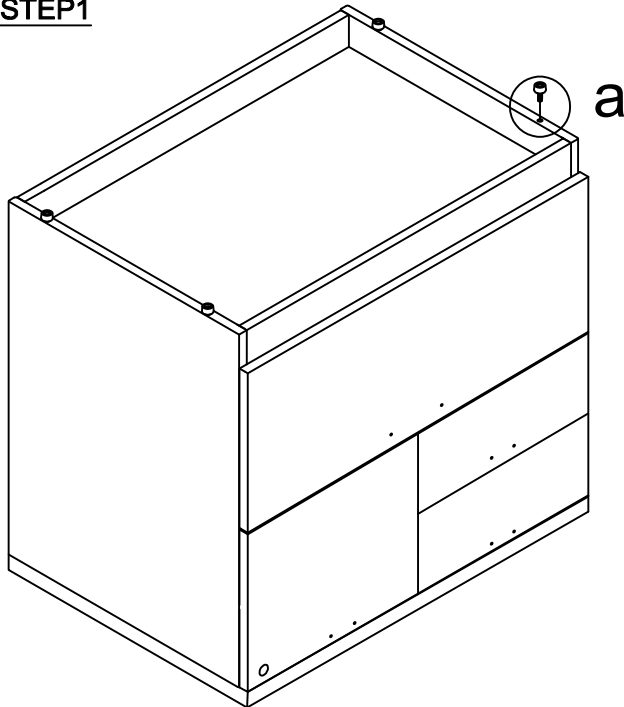
Assembly Instructions

MODEL NO. N114






4 DRAWER LATERAL FILE

TUN021AG  A Adjustable Glide 4 PCS	TUN006MH  B 96mm Metal Scallop shape Handle 1Set	TUN005MH  C 32mm Metal Scallop shape Handle 3Set	TUN001FC  D File clip 8Pcs	E  675*16*3mm Aluminum Bar 1Pc	F  377*16*3mm Aluminum Bar 2Pcs	G  297*16*3mm Aluminum Bar 1Pc	H  Keys 1set
---	---	---	---	---	---	---	---

STEP1



STEP2

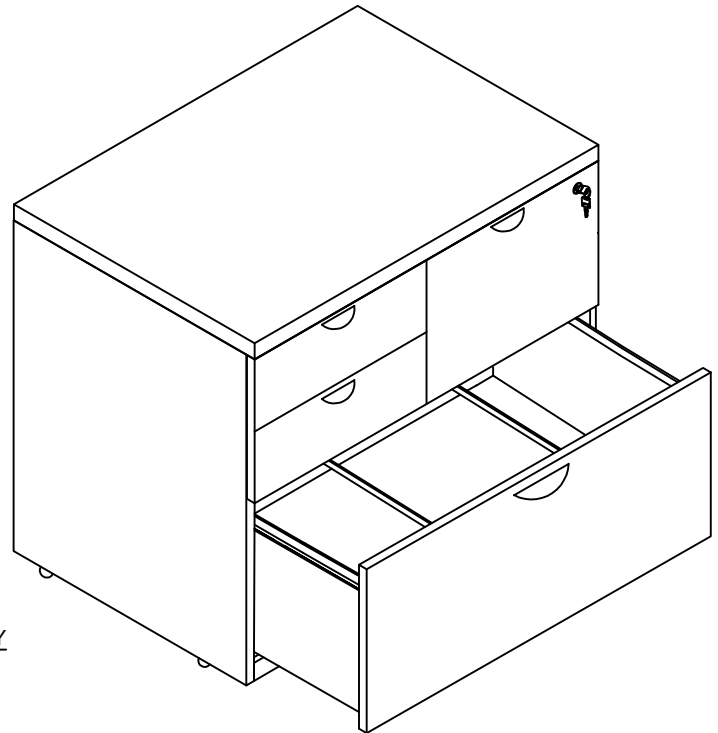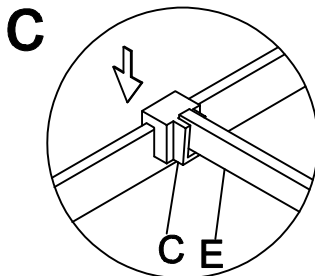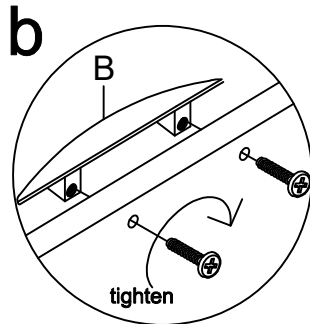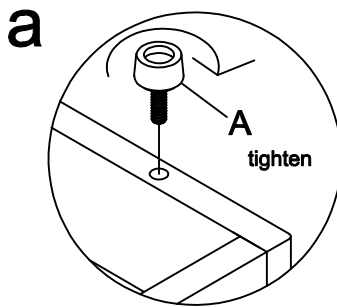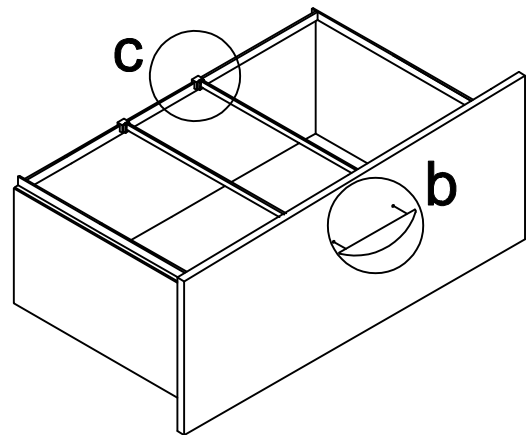

COMPLETED ASSEMBLY


IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until completely assembled.
- Keep hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at www.bossschair.com

REMOVE THE TOP PANEL INSTRUCTIONS
MODEL NO. N114
4 DRAWER LATERAL FILE



Remarks: Do not remove the top panel unless necessary.

STEP3

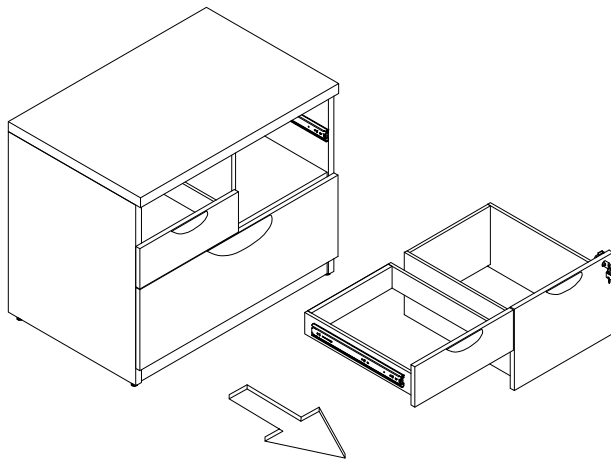

Loosen all the cam locks at the 4 corners, then top can be taken off.

STEP4

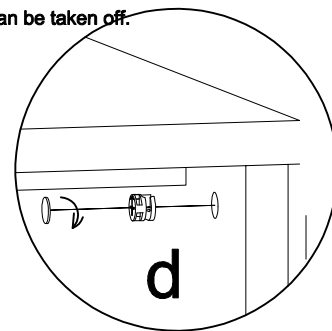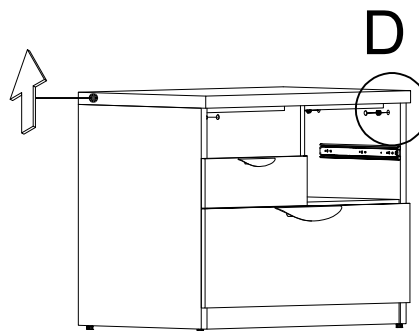

Loosen cam locks



STEP5

